

REMINGTON®
PROFESSIONAL

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE

AERO 2000



2 YEAR **WARRANTY**

D2115AU

IMPORTANT SAFEGUARDS

Warning: Do not use this appliance near bath tubs, showers, basins or other vessels containing water.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- This appliance can be used by children aged from 8 years and

above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this dryer is damaged it must only be replaced by a qualified electrical tradesperson.
- Keep the cord away from heated surfaces.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.

SAVE THESE INSTUCTIONS

D2115AU AERO 2000 HAIR DRYER

Use & Care Instruction Manual

Thank you for purchasing your new Remington® Aero 2000 hair dryer. You now have the flexibility to dry and style your hair with as many as 6 styling option combinations provided with the separate heat and speed settings plus cool shot.



KEY PARTS

1. Slimline concentrator
2. Handle
3. Air Inlet grille
4. Hang loop
5. Cool shot button
6. Air Outlet grille
7. Speed settings
0 – Low heat
x – Low speed
X – High speed
8. Heat settings
 - ⎓ Low heat
 - ⎓ Medium heat
 - ⎓ High heat

HAIR MAINTENANCE

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture.

COOL SHOT

This hair dryer is equipped with a cool shot that is used to hold your hairstyle. Squeeze and hold the cool shot button to rapidly cool and hold your hair once it has been styled.

QUICK DRYING

Select a high heat and high speed setting and roughly dry your hair. Use a brush or your hand to shake out excess moisture whilst drying, keeping the hair dryer moving constantly.

STRAIGHTENING

Select high heat and speed and roughly dry the hair. When the hair is nearly dry, attach the concentrator nozzle (which minimises frizz) and reduce the heat and speed. Section the hair according to thickness and begin with straightening the bottom layers first. Using a round or flat brush, follow the brush with the concentrator from above, gliding down each section of hair from roots to tips. Once the bottom layers have been straightened, then straighten the mid section and complete by straightening the top layers.

NATURAL WAVY TEXTURE

Using a low heat/speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand, while directing the airflow through your fingers. Once you have reached the desired effect, use the cool shot on each section of hair to hold the style. For more volume lean forward and dry the hair in the upside down position.

LIFT & VOLUME

Using the hair dryer on low heat/speed setting, work from the roots of the hair and begin at the back of the head. Section your hair and use a brush or fingers to dry against its natural growth pattern. This creates lift at the roots, which creates a style with volume.

STYLING

Set the hair dryer to low heat/speed setting and attach the concentrator nozzle for precision drying. Section the hair and style using a round thermal styling brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2 – 5 seconds on each section while curling under or over for additional hold.

USER INSTRUCTIONS

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet openings. In the event that the hair dryer stops during use, turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet openings are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

MAINTENANCE

Your hair dryer is designed for household use and is virtually maintenance free. No lubrication is needed. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

To maintain peak product performance, it is important to clean the air inlet grille at the back of the hair dryer. To access the air inlet filter open the hinged air inlet grille. Simply apply thumb pressure to the patterned area at the top of the grille and swing out. The filter can now be removed and cleaned with a soft brush or a vacuum cleaner. Replace the filter and closer the air inlet grille. The exterior of the hair dryer can be cleaned by wiping it with a damp cloth.

STORAGE

When not in use, always unplug the hair dryer from the power outlet. Allow the hair dryer to cool and store out of the reach of children in a

safe, dry place. Never wrap the power cord around the hair dryer as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it.

You may also use the hang loop to store the hair dryer within convenient reach, ensuring that water cannot be splashed on to it when it is hung up.



This product is not suitable to use in a bath or shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

Building C, Ground Floor

600 Great South Road,

Greenlane, Auckland 1051 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON®

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

② New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

©2012 SBI

Rev. 05/12

Part No. T22-0000267